Installing the Regulator

C

D

Thread the regulator into the SAE-4F port of the RCV/RCR unit or Manifold where you wish to install the regulator and torque to **60 in-lbs.**

Connect the outlet tubing to the remainder of your oxygen system.

Open the cylinder valve **SLOWLY** (~ 2 turns).

Removing the Regulator

DO NOT ATTEMPT TO REMOVE REGULATOR WHILE UNDER PRESSURE

2

Bleed-off internal pressure by first *closing the main cylinder valve* and then disconnecting the outlet tubing from the regulator.

The regulator can now be removed.

1



Α

В

C