



00HDW-0400-00

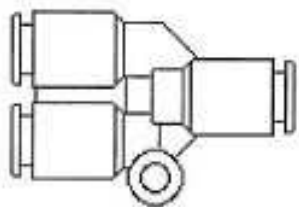


6mm Y Fitting

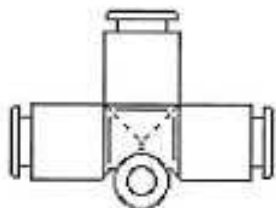


6mm Tee Fitting


To inset tubing

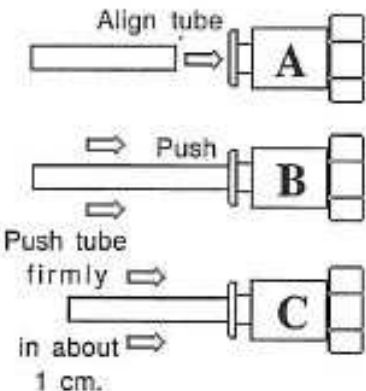

To remove tubing

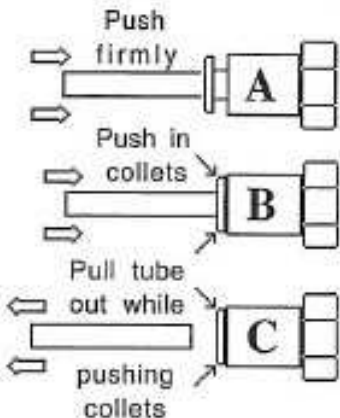

MADE IN THE USA

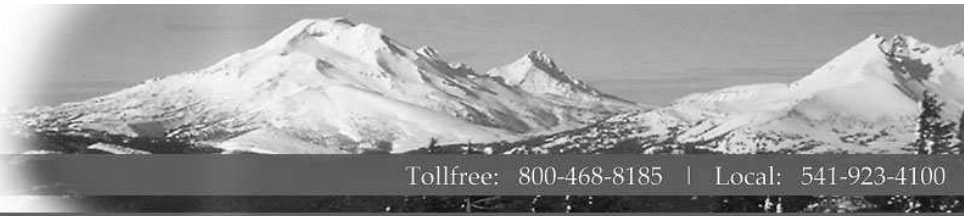


Tollfree: 800-468-8185 | Local: 541-923-4100

CUSTOM BUILT-IN AND CARRY ON AVIATION OXYGEN SYSTEMS


Mountain High Oxygen, 2244 SE Airport Way, Suite 100, Redmond OR. 97756 MHOxygen.com

5IHDW-0400-00  
02/11/2014

00HDW-0400-00

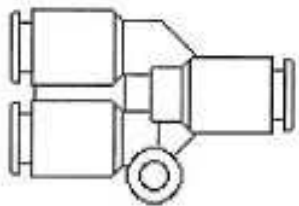


6mm Y Fitting

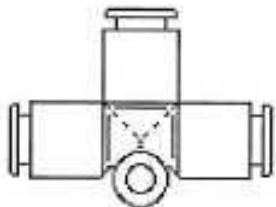


6mm Tee Fitting

To inset tubing

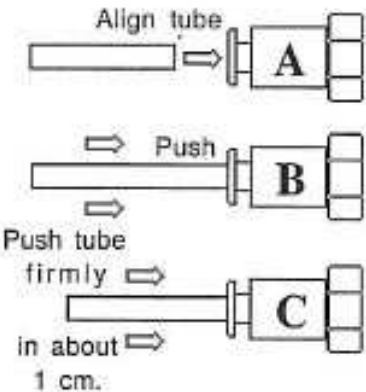

To remove tubing

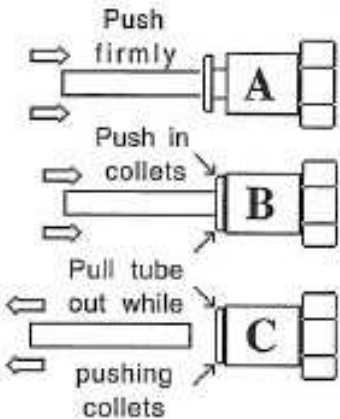

MADE IN THE USA



Tollfree: 800-468-8185 | Local: 541-923-4100

CUSTOM BUILT-IN AND CARRY ON AVIATION OXYGEN SYSTEMS

Mountain High Oxygen, 2244 SE Airport Way, Suite 100, Redmond OR. 97756 MHOxygen.com

5IHDW-0400-00  
02/11/2014