

# 19053-0009-00

## Quick Disconnect E-Z Breathe


Date: \_\_\_\_\_



1: Loosen thumb screw and unsnap the boom arm from the ball mount.



2: Cut out the joint fitting in the tubing located about two inches down from the arm mount.

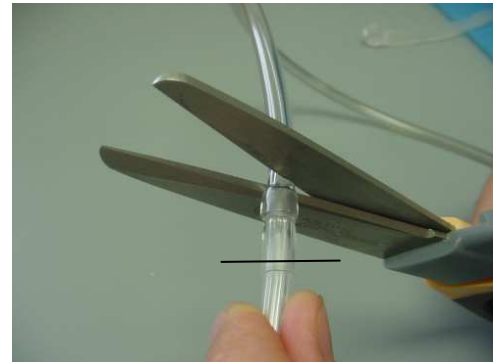

3: Insert the QD connector into both sides of the tubing ends by inserting the 1/8" barb into each piece of tubing. Make sure the quick disconnect twist lock union is properly connected together.



4: Reattach the boom arm to ball mount and tighten the thumb screw.

