

Introduction

Almost all compressed gas containers are fitted with pressure relief devices. A pressure relief device is a pressure- and/or temperature-activated device used to prevent the pressure from rising above a predetermined maximum, and thereby prevent rupture of a normally charged cylinder when subjected to a standard fire test as required by Title 49 of the U.S. Code of Federal Regulations (49 CFR 173.34(d)), or equivalent regulations of Transport Canada.

Pressure Relief and Safety Devices

The Compressed Gas Association, in pamphlet CGA S-1.1, has classified pressure relief devices according to type using the letter designation CG followed by a numeral. Each of these types is described in the following subsections (reference CGA S-1.1).

Type CG-1 (Pressure Relief Rupture Disk). A rupture disk (synonymous with the name burst disk within the industry) is a pressure-operated device which affords protection against development of excessive pressure in cylinders. This device is designed to sense excess pressure in a cylinder and will function when the cylinder pressure is of sufficient magnitude to cause the rupture or bursting of the rupture disk element, thereby venting the contents of the cylinder. The rupturing of the rupture disk element results in a nonreclosing orifice.

Rupture disk devices installed on compressed gas cylinders may be either an integral part of the cylinder valve assembly or may be installed on the cylinder as an independent attachment. The materials of construction selected must be compatible with the fluid in the cylinder as well as the cylinder valve materials with which the rupture disk device comes in contact in order to minimize corrosion.

One of the most common types of rupture disk devices consists of (1) a gasket, (2) a rupture disk, and (3) a rupture disk holder. These components are only supplied as factory-assembled devices designed to be replaced as a unit.

The gasket is the part which provides the proper seal to prevent leakage of the cylinder contents past the rupture disk assembly and may be constructed of metallic or nonmetallic materials.

The rupture disk is the operating part of the pressure relief device and, when installed in a proper rupture disk holder, is designed to burst at a predetermined pressure to permit discharge of the cylinder contents. Such disks are usually made of metallic materials and may be of flat, preformed, reinforced, grooved, or scored construction. Nonmetallic materials are also used for specific applications.

The rupture disk holder is the part of the pressure relief device which contains the opening, against which the rupture disk mates. The rupture disk holder usually also contains the discharge porting or passages, beyond the operating parts of the device, through which fluid must pass to reach the atmosphere. In many cases, the discharge holder is provided with radial vent holes through which the fluid in the cylinder vents to the atmosphere. This radial discharge design provides an anti-recoil feature which minimizes rocketing of compressed gas cylinders during discharge of the contents through the pressure relief device. Other types of discharge ports may also be provided in rupture disk holders to suit specific application requirements.

Most rupture disk devices are designed with holders having either sharp-edged or radius-edged orifices to which the rupture disk mates. The sharp-edged orifice produces a shear-type actuation mode whereby the disk ruptures in shear, producing a characteristic leaf-type configuration after functioning.

The radius-edged orifice produces a tension-type actuation mode whereby the disc stretches over the radius-edge. This thins the center of the disc until it can no longer hold the pressure. This type of rupture produces a characteristic rose petal configuration after functioning.

Since the actuation modes of each type of holder described above are completely different, it is important that only original manufacturer's assemblies be used in the replacement of rupture disk devices.

▲WARNING

The pressure relief rupture disk device is a primary safety component

and hence the following precautions should be noted and adhered to:

- a) Only trained personnel should be permitted to service pressure relief devices.
- b) Tightening of the rupture disk assembly to the cylinder valve or to the cylinder itself should be in accordance with the manufacturer's instructions. Tightening to a torque less than the manufacturer's recommendations may result in a leaking device or a device that may rupture at a lower pressure than specified. Conversely, over tightening can also result in disk actuation at a lower pressure than specified due to an excessive twisting action which may create wrinkles or distortions in the disk, which may cause premature failure of the disk and inadvertent release of the cylinder contents. Either of these premature releases could cause serious injury or death.

▲WARNING

Components of devices designed to rupture in shear are very similar in

appearance to those designed to rupture in tension, but are not interchangeable because they have completely different modes of actuation. If components are inadvertently interchanged, i.e. a disk designed to rupture in shear is installed in a rupture disk holder designed to rupture in tension, a serious cylinder failure incident could result that could lead to loss of life due to the significant increase in pressure required to rupture the disk. Conversely, if a disk designed to rupture in tension is installed in a rupture disk holder designed to rupture in shear, premature rupture could occur with complete loss of contents due to the significant reduction in rupture pressure of the disk. That may lead to fire, personal injury or death.

LIMITATIONS:

A rupture disk is a pressure-operated device which affords protection against excessive pressure. It protects against excessive pressure when the properties of the gas, cylinder design, and percentage of charge in the cylinder are such that exposure to excessively high temperatures will cause an increase in internal pressure sufficient to actuate the rupture disk before the cylinder loses its integrity and weakens. The rupture disk also protects against excessive pressure due to improper charging practices such as overfilling.

A rupture disk is a nonreclosing device. Once the disk has ruptured, there is no way to prevent the complete release of the contents of the cylinder.

This device does not provide good protection against pressures caused by exposure to excessively high temperatures when the cylinder is only partially charged. The pressure rise may not be sufficient to actuate the rupture disk before the cylinder loses its integrity and weakens.

Consideration should be given to environmental conditions to which the cylinder may be exposed. Severely corrosive atmospheres may contribute to premature rupture of the disk. To prevent corrosion of the rupture disk, care must be taken to select materials of construction that do not interact with either the contents of the cylinder or the anticipated environmental conditions.

Type CG-2 and CC-3 (Fusible Plugs). A fusible plug is a thermally-operated pressure relief device which affords protection against excessive pressure developed by exposure to excessive heat. Once sufficient heat melts the fusible alloy, the entire contents of the cylinder will be vented. The CG-2 fusible alloy has a nominal melt temperature of 165°F (73.9°C); the CG-3 fusible metal has a nominal melt temperature of 212°F (100°C).

Fusible plugs can be installed on the cylinder as independent devices, or fusible alloy can be cast directly into a suitable orifice in the cylinder valve body. In some cases, a fusible plug may be installed as a separate device into the cylinder valve body.

WARNING

No attempt should be made to repair fusible plug devices. They are not repairable and attempts to repair will destroy the integrity of the fusible alloy causing leakage of gases that may lead to fire, personal injury or death.

NOTE: The same precautions noted for CG-1 devices should be adhered to for CG-4 and CG-5 devices. See "Warning's" on pages 1 and 2.

LIMITATIONS:

Since the fusible plug is a thermally operated device, it is designed to function only when the fusible metal melts out. Hence, it does not protect against over pressure from improper charging practices.

Sufficient heat to melt the fusible alloy is necessary for proper functioning of this type of device. Therefore, the location of such devices is an important consideration.

Industry practice limits the application of these style fusible plugs to cylinders with 500 psig (3447 kPa) service pressure or less to minimize the possibility of cold flow or extrusion of the fusible alloy.

A fusible plug device is a nonreclosing device and, when it functions, it releases the entire contents of the cylinder.

Type CG-4 and CG-5 (Combination Rupture Disk/Fusible Plug). A combination rupture disk/ fusible plug pressure relief device requires both excessive pressure and excessive temperature to cause it to operate. Sufficient heat is required to first melt out the fusible metal, after which the device will afford the same protection as the CG-1 rupture disk device.

The CG-4 combination device has fusible alloy with a nominal melt temperature of 165°F (73.9°C). The CG- 5 combination device has fusible alloy with a nominal melt temperature of 212°F (100°C).

In this type of device, the rupture disk portion (CG-1) is directly exposed to the internal cylinder pressure, and so it is directly upstream of the fusible metal. In general, the same components that make up the CG-1 device are used and the vent portion or downstream side of the rupture disk holder is suitably filled with fusible metal. The rupture disk is thus reinforced against rupturing by the fusible alloy, and the fusible alloy is reinforced against extrusion by the rupture disk.

LIMITATIONS:

CG-4 and CG-5 combination devices function only in the presence of both excessive heat and excessive pressure, and sufficient heat must be present first to melt the fusible metal.

Therefore, this device does not offer protection against over pressure from improper charging practices.

Type CG-7 (Pressure Relief Valves). A pressure relief valve is a spring-loaded pressure-operated device designed to relieve excessive cylinder pressure, reclose, and reseal to prevent further release of product from the cylinder after excessive pressure is removed and valve resealing pressure has been achieved.


The primary advantage of using the pressure relief valve is that functioning of this type of device may not release all of the contents of the cylinder, but is designed to reseal after resealing pressure has been achieved. This characteristic, in fire conditions, will minimize feeding the fire in the case of flammable or combustible cylinder contents.

LIMITATIONS:

Pressure relief valves are designed to maintain the pressure in the cylinder at a limit as determined by the spring force. Therefore, such devices do not protect the cylinder against possible rupture when continued application of external heat or direct flame impingement weakens the cylinder wall to the point where its rupture pressure is less than the operating pressure of the relief valve.


If you require any assistance in selecting a Pressure Relief or Safety device for a specific application, please call Sherwood Customer Service at (716) 283-1010 with the following information:

- The part number of the Valve Assembly being repaired, if applicable.
- Type of gas service in which cylinder will be used.
- Service or test pressure of the cylinder.

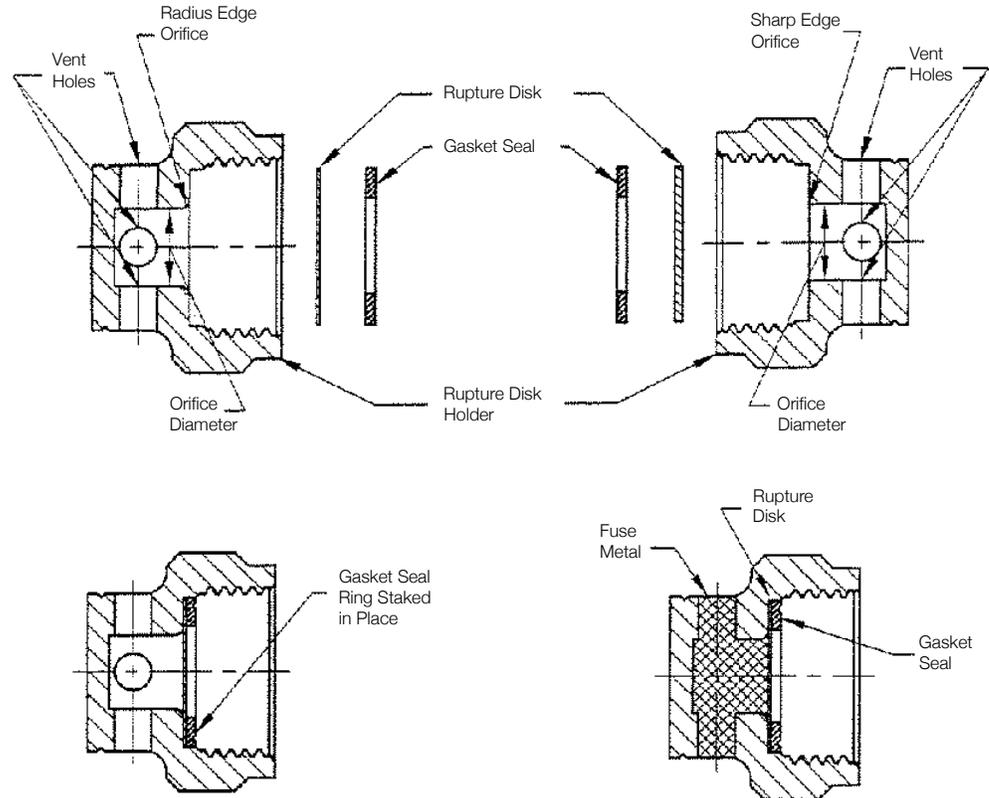

PRESSURE RELIEF DEVICE SELECTION CHART

-XX Suffix	Cylinder Service Pressure			Disc Rupture Range Psig @ 165° F		Pressure Relief Device Cap Stamping	Pressure Relief Device Replacement Part Number		
	D.O.T. Spec. 3A, 3AA, 3AL Cylinders In Psig	D.O.T. Exemption Cylinders In Psig	Foreign Cylinders In Bars	Minimum	Maximum		CG-1 Style Frangible Disc Only	CG-4 Style Frangible Disc & 165° F Fuse Metal	CG-5 Style Frangible Disc & 212° F Fuse Metal
-26	1665			2500	2775	2775	650-19F9-26	650-19SM9-26	650-19SB9-26
-28	1800			2700	3000	3000	650-19F9-28	650-19SM9-28	650-19SB9-28
-32	2015			3025	3360	3360	650-19F9-32	650-19SM9-32	650-19SB9-32
-35	2265			3400	3775	3775	650-19F9-35	650-19SM9-35	650-19SB9-35
-38	2400			3600	4000	4000	650-19F9-38	650-19SM9-38	650-19SB9-38
-39			200	3915	4350	4350	650-19F9-39	650-19SM9-39	650-19SB9-39
-43	2670			4005	4450	4450	650-19F9-43	650-19SM9-43	650-19SB9-43
-46	2900			4350	4833	4833	650-19F9-46	650-19SM9-46	650-19SB9-46
-47	2950			4425	4917	4917	650-19F9-47	650-19SM9-47	650-19SB9-47
-48	3000			4500	5000	5000	650-19F9-48	650-19SM9-48	650-19SB9-48
-50		3600		4860	5600	5600	650-19F9-50	650-19SM9-50	650-19SB9-50
-55	3500/3600			5250	5833	5833	650-19F9-55	650-19SM9-55	650-19SB9-55
-63	4000			6000	6665	6665	650-19F9-63	650-19SM9-63	650-19SB9-63
-65		4500		6750	6750	6750	650-19F9-65	650-19SM9-65	650-19SB9-65
-78	5000			7500	8333	8333	650-19F9-78	650-19SM9-78	650-19SB9-78
-85		6000		8100	9000	9000	650-19F9-85	650-19SM9-85	650-19SB9-85
-95	6000			9000	10000	10000	650-19F9-95	650-19SM9-95	650-19SB9-95

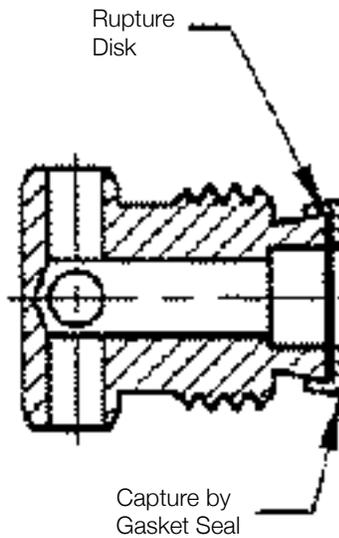

PRESSURE RELIEF DEVICE SELECTION CHART FOR POST TYPE MEDICAL VALVES

XX SUFFIX	CYLINDER SERVICE PRESSURE	DISC RUPTURE RANGE PSIG AT 160° F		RUPTURE DISC STAMPING	PRESSURE RELIEF DEVICE REPLACEMENT PART NUMBER	
		MINIMUM	MAXIMUM		CG-1 WITH NO FUSE METAL	CG-4 WITH FUSE METAL
-28	1800	2700	3000	3000	9-4000-60-28	6513MF-28
-32	2015	3025	3360	3360	9-4000-60-32	6513MF-32
-48	3000	4500	5000	5000	9-4000-60-48	6513MF-48