

Instructions for the EOS face mask 00EOS-0018-00

Please Read Before Use.

Each EOS type face mask has the following items:

- 1: CPC type *male* snap quick-connector
(connected to the 3' tube).
- 2: Fixed flow control orifice
(set for 3.0 liters/minute with an EOS regulator).
- 3: Red/Green '**Roto**' type positive inline flow indicator.
- 4: Accumulating type non-rebreather face mask.


To use: Put on face mask making sure that it covers your nose and mouth and insert the connector into the oxygen outlet and turn on the oxygen supply.

Spinning Type




- Oxygen is **flowing** if the flow indicator spinner is **spinning**.
- Oxygen is **not flowing** if it is **not spinning**.

Toggle Type



- Oxygen is **flowing** if the flow indicator shows **green**.
- Oxygen is **not flowing** if it is showing **red**.

(toggle type special order only)

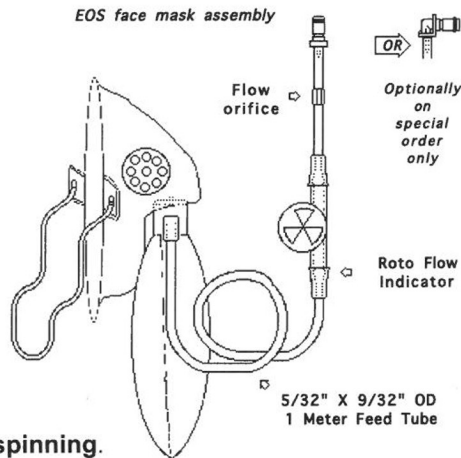

MH
Aviation Oxygen Systems
MOUNTAIN HIGH
Equipment & Supply Company

5IEOS-0018-00d