

4

3

2

1

GSE-1042-00 (SCD)


GENERAL SPECIFICATIONS

TUBING MATERIAL: 99.9% COPPER, 0.02% PHOSPHORS UNS C12200, ASTM-B75
 FITTING MATERIAL: CDA BRASS B124/CA377 PER SAE J514, J530

PRESSURE RATING: 3000 PSIG.
 SAFETY FACTOR: 2:1
 WEIGHT: 1.7 oz. (48 g)

CLEAN: PER AIR 1176A SEC. 5 (CGA G-4.1)
 MFG. / VEN. CODE: MH

REVISION HISTORY			
REV	DA-MO-YR	E. C. O. / APPR.	NOTES
A	30-01-2013	PLM	RESTORED CHAN LINK
B	08-10-2014	PLM	ADDED MATERIAL & DIMENSIONAL DETAIL
C	21-01-2015	HBS, PLM	CHANGED ASTM FROM 68 TO 75

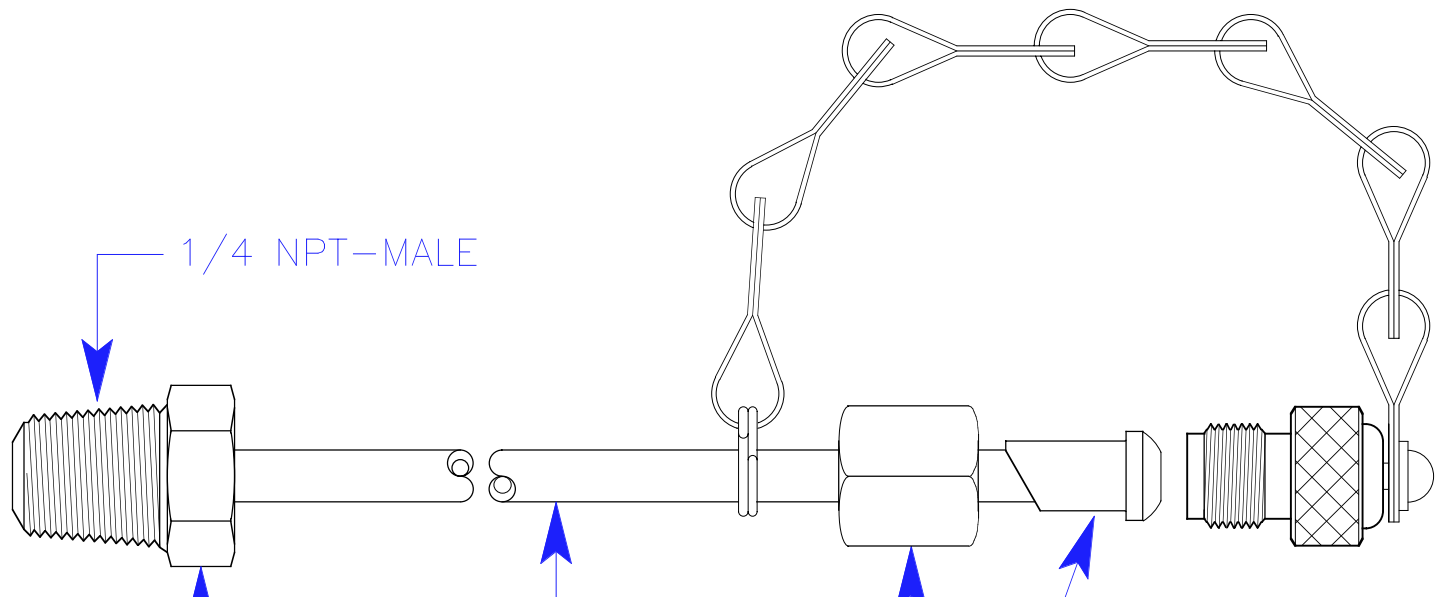

1/4 NPT-MALE

9/16 HEX

3/16" OD COPPER TUBE

7/16 HEX

AN800-3 (3/8-24)

**SOURCE CONTROL DOCUMENT
FOR REFERENCE ONLY**

UNLESS OTHERWISE SPECIFIED DIMS ARE IN INCHES. TOLERANCES ARE:				THIRD ANGLE PROJECTION		MOUNTAIN HIGH E&S CO. REDMOND, OR. USA	
0.X	±0.015	ANGLES	FRACTIONS	63	[KC]	NUMBER OF KEY CHARACTERISTICS IN THIS DRAWING / DOCUMENT PER MH DOC: ESR-001	
0.XX	±0.010	± 0.5°	± 1/64				
0.XXX	±0.005						
INTERPRET GD&T PER ASME 14.5				FMT REV H		DO NOT SCALE DRAWING	
ORIGINAL MO-DA-YR	PLM, 06-15-01	MATERIAL	1	DWG. TITLE (SCD) ADPT: 1/4 NPT-MALE TO AN800-3			
ENGINEER MO-DA-YR	PLM, 06-15-01	FINISH	2	DWG. NUMBER	SCD: 00GSE-1042-00	DWG. REVISION	REV C
DRAWN MO-DA-YR	PLM, 06-15-01	CLEAN	3	CAD FILE NUMBER	AN-800 to Misc: GSE-1042-00	DWG. SHEETS	1 OF 1
CHECKED MO-DA-YR	-	MARKING	4	INV. PART NUMBER	00GSE-1042-00	INSERT NUMBER	5IGSE-1042-00
				DWG. SIZE	A		

5IGSE-1042-00 (SCD)

4

3

2

1

D

D

C

C

B

B

A

A