

4


3

2

1



| REVISION HISTORY |          |                  |                     |
|------------------|----------|------------------|---------------------|
| REV              | MO-DA-YR | E. C. O. / APPR. | NOTES               |
| A                | 01-09-06 | SBW              | UPDATE PART NUMBERS |
| B                | 08-09-06 | PLM              | UPDATE NOTE DETAILS |
|                  |          |                  |                     |

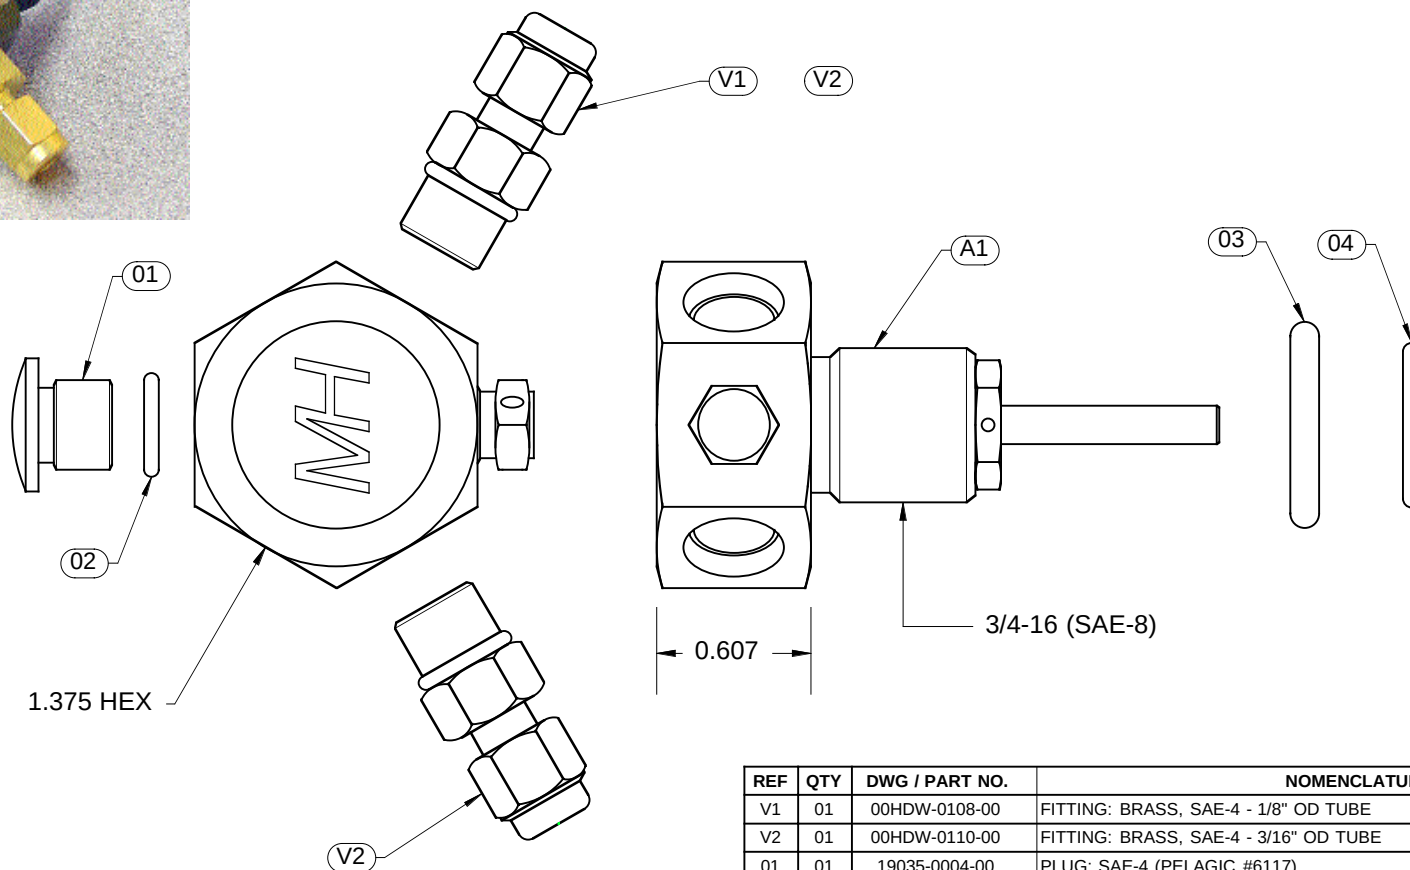


| REF | QTY | DWG / PART NO. | NOMENCLATURE                                                 |
|-----|-----|----------------|--------------------------------------------------------------|
| V1  | 01  | 00HDW-0108-00  | FITTING: BRASS, SAE-4 - 1/8" OD TUBE                         |
| V2  | 01  | 00HDW-0110-00  | FITTING: BRASS, SAE-4 - 3/16" OD TUBE                        |
| 01  | 01  | 19035-0004-00  | PLUG: SAE-4 (PELAGIC #6117)                                  |
| 02  | 01  | 09001-0904-75  | O-RING: 2-904 VITON (SAE-4)                                  |
| 03  | 01  | 09001-0210-90  | O-RING: 1 1/16" OD X 3/4" ID VITON (MSS) (ALUMINUM CYLINDER) |
| 04  | 01  | 09001-0908-75  | O-RING: 2-908 VITON (SAE-8) (KEVLAR CYLINDER)                |
| A1  | 01  | CM01-101       | ASSEMBLY (SERVICE PRESSURE FUNCTION OF HPRD INSTALLED)       |

SOURCE CONTROL DOCUMENT  
FOR REFERENCE ONLY  
PRODUCT: LPM-75

**ASSEMBLY:**

01: TORQUE ITEMS V1, V2 AND 01 TO 60± 5 IN/LBS.  
02: TORQUE ITEM A1 ON CYLINDER TO 65 ± 5 FT/LBS.



[KC]  
00  
NUMBER OF KEY CHARACTERISTICS  
IN THIS DRAWING / DOCUMENT  
PER MH DOC: ESR-001  
**MH**  
MOUNTAIN HIGH  
E&S CO.  
REDMOND, OR. USA

|           |     |  |                                          |
|-----------|-----|--|------------------------------------------|
| ISSUED:   | PLM |  | MANIF; CYL. SAE-8 to SAE-4 x 120°        |
| DRAWN:    | PLM |  | DWG. #: CM01-101-00                      |
| ENGINEER: | PLM |  | REV B                                    |
| APPR:     | -   |  | SIZE A SHEET 2 OF 2 DO NOT SCALE DRAWING |

4

3

2

1