

4

3


2

1

REVISION HISTORY


REV	DA-MO-YR	E. C. O. / APPR.	NOTES
-	02-10-05	XXX	INITIAL DRAFT

REMOTE MOUNTED IPR ASSY.

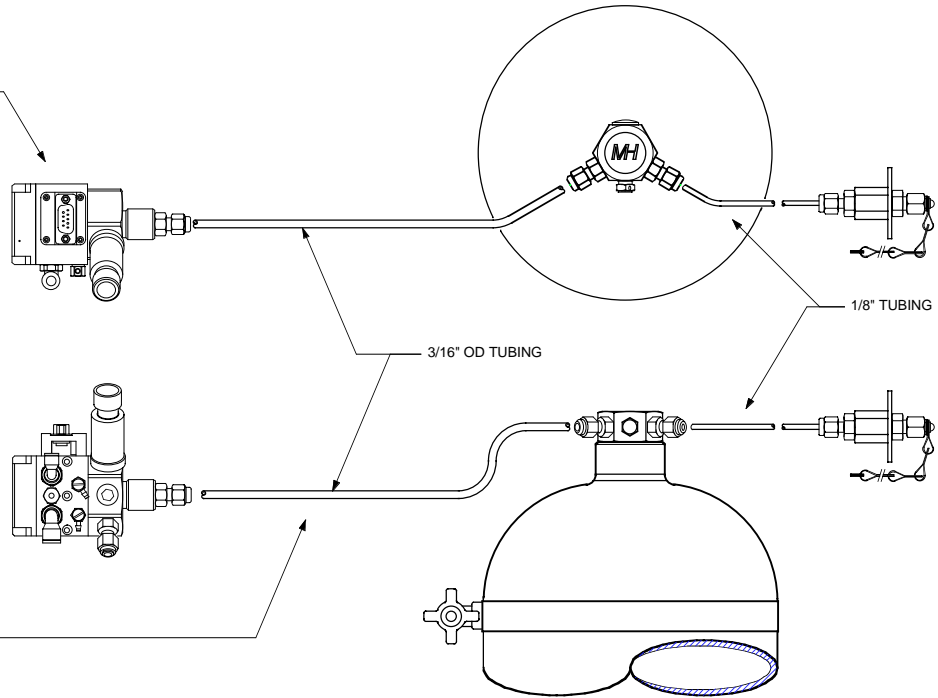

3/16" or 1/4" OD TUBING MUST BE USED TO CONNECT THE IPR IF USED IN A REMOTELY MOUNTED CYLINDER OR IF TWO OR MORE CYLINDERS ARE USED IN THE SYSTEM.

THE FILL STATION CAN USE 1/8" OD TUBING FOR ANY LENGTH UP TO 50 METERS.

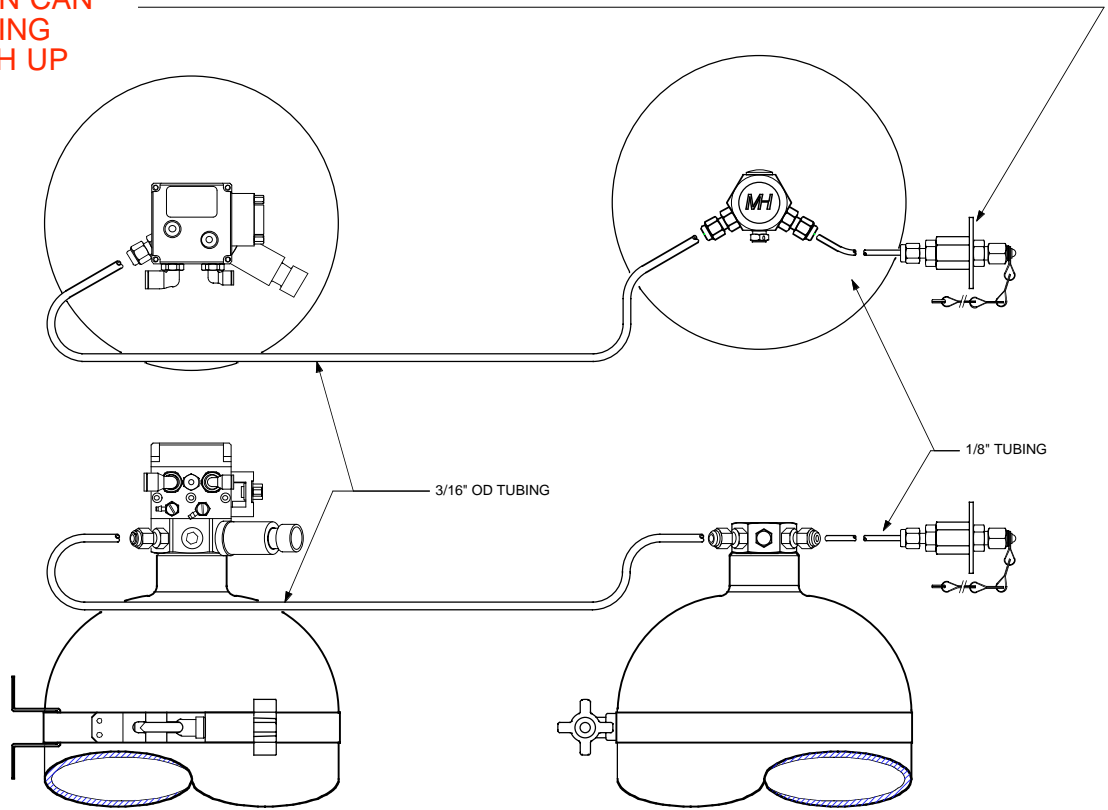

UNLESS OTHERWISE SPECIFIED DIMS ARE IN INCHES. TOLERANCES ARE:			THIRD ANGLE PROJECTION.		 MOUNTAIN HIGH E&S CO. REDMOND, OR. USA
0.X	±0.010	ANGLES	FRACTIONS	63/	
0.XX	±0.005	± 0.5°	± 1/64	✓	
0.XXX	±0.002			(FMT REV C)	
INTERPRET GD&T PER ASME 14.5					
ISSUED:	DA-MO-YR	IPR TUBING INTERFACE			
DRAWN: PLM	02-10-05	DWG. #:			REV -
ENGINEER:	DATE	SIZE A			SHEET 1 OF 1
APPR:	DATE	DO NOT SCALE DRAWING			

4

3

2

1