
1 2

 REV
 ECO
 Release
 Drawn
 REVISION HISTORY

 -0
 2022-033
 2022-11-07
 SGO
 Customer Drawing - Insert

# **OUTLET TUBING CONNECTION - 4mm/6mm Push-To-Connect Fittings**

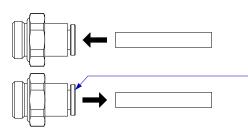

#### **INSERTING**

Push in the tubing

#### REMOVING

1. Push in the connector collar

Α

В


C

2. Pull the tube straight back while holding the collar in

**To INSERT TUBING:** Push the tubing into the connector until resistance is felt, **then push a little further, about 1/8 inch [3 mm].** Gently tug on the tubing to make sure it is captured.

**To REMOVE TUBING:** Push the tubing in slightly, then push in the connector collar while pulling gently on the tubing.

When removing tubing, <u>DO NO</u>T pull on the tubing without pushing in the collar, as this will likely damage the connector.

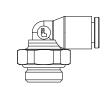

**Note:** Alternate right-angle outlet fitting provided.

- Replace installed fitting as preferred.
- Maintain cleanliness for oxygen service.
- No Teflon tape required
- Torque to 20 in-lbs.

Model 310-006 p/n 00REG-1052-01

### GENERAL SPECIFICATIONS

Α

В

C

D

Inlet Pressure Rating: 3000 PSI MAX

Regulated Output:  $16 \pm 2 \text{ PSI (Dynamic) (NOM 1 Bar)}$ 

 $20 \pm 2$  PSI (Static)

Average Open Flow Rate: 50 L/min (AVG) Weight: 3.0 Oz. [85 g]

Spare O-ring: MH p/n 09001-0011-90 (CGA-540 Inlet Nipple)

See also: MH document 5SREG-310-xxx

### Installing the Regulator

Seat the inlet nipple of the regulator into the corresponding outlet socket of the cylinder valve and turn the grip nut to engage the valve threads.

Complete the connection by turning the grip nut **HAND TIGHT ONLY!** <u>DO NOT use a</u> wrench or pliers. Over-tightening will damage the regulator. The integrity of the connection is provided by an o-ring seal and is not dependant on the tightness of the threaded coupling.

Connect the outlet tubing and assemble the remainder of your oxygen system (EDS unit or Flowmeter).

Open the cylinder valve **SLOWLY** (~ 2 turns).

1

## Removing the Regulator

#### DO NOT ATTEMPT TO REMOVE REGULATOR WHILE UNDER PRESSURE

The regulator grip-nut will be difficult to turn while under pressure, and doing so will destroy the regulator inlet O-ring.

Bleed-off internal pressure by first *closing the main cylinder valve* and then disconnecting the outlet tubing from the regulator.

The grip nut should now turn easily by hand and the regulator can be removed.



2

3

Insert #: 5IREG-1052-01